

TOP VIEW

#### ABBREVIATIONS

EA: Exhaust Air to outside  
 OA: Outside Air intake  
 RA: Room Air to be exhausted  
 SA: Supply Air to inside


#### INSTALLATION ORIENTATION

Unit may be installed in any orientation.


#### NOTE

1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.


2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

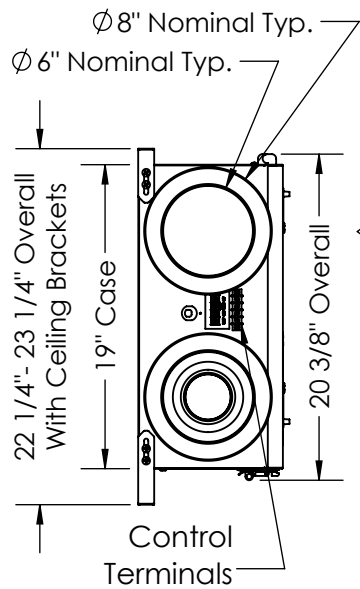

LEFT VIEW  
 (Hard Mount Depicted)  
 (Line Cord Hidden)

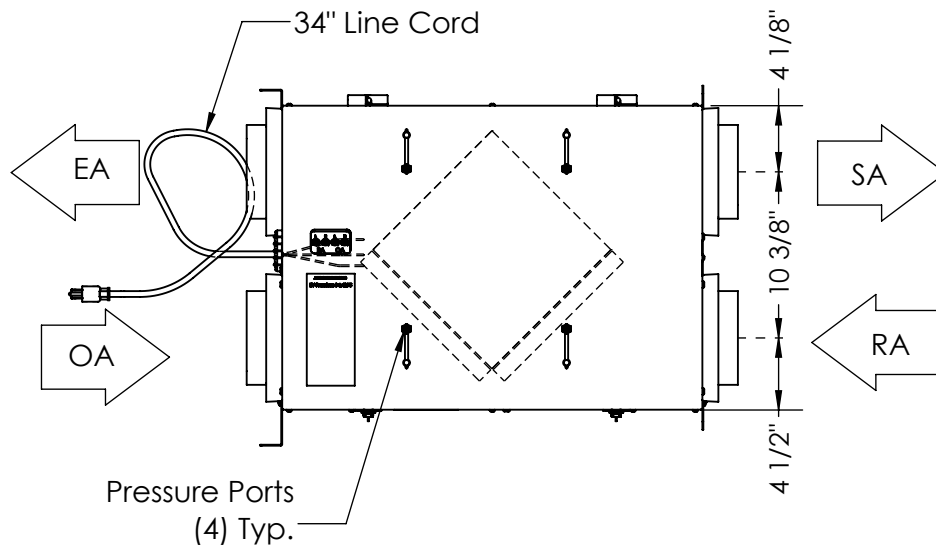

FRONT VIEW

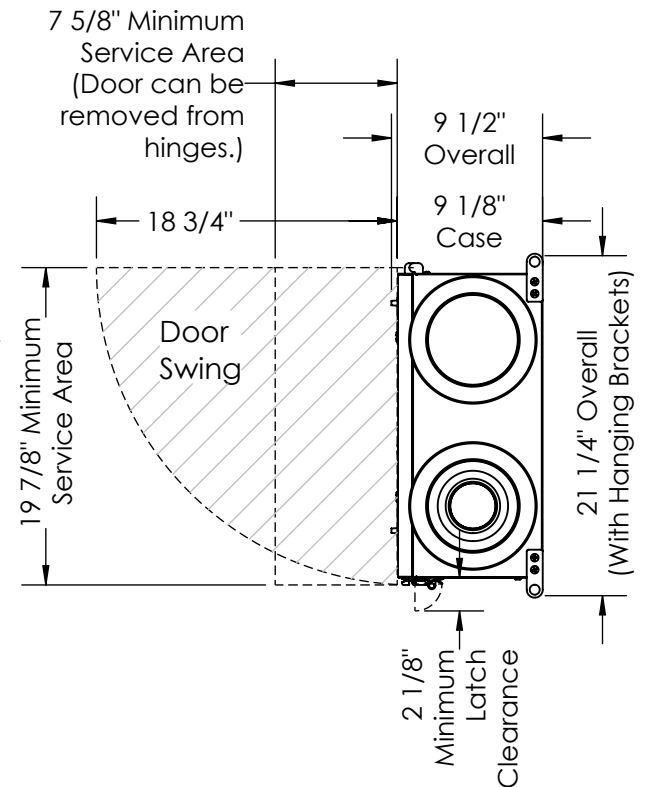

RIGHT VIEW  
 (Hanging Mount Depicted)