

ABBREVIATIONS

EA: Exhaust Air to Outside
 OA: Outside Air Intake
 RA: Room Air to be Exhausted
 SA: Supply Air to Inside
 BP: Bypass Air Outlet
 RTF: Rooftop Vertical SA Only
 RTH: Rooftop Horizontal RA & SA

INSTALLATION ORIENTATION



Unit must be installed in orientation shown.

NOTE

1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.

2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

CURB CROSS-SECTION A-A (TYP.)

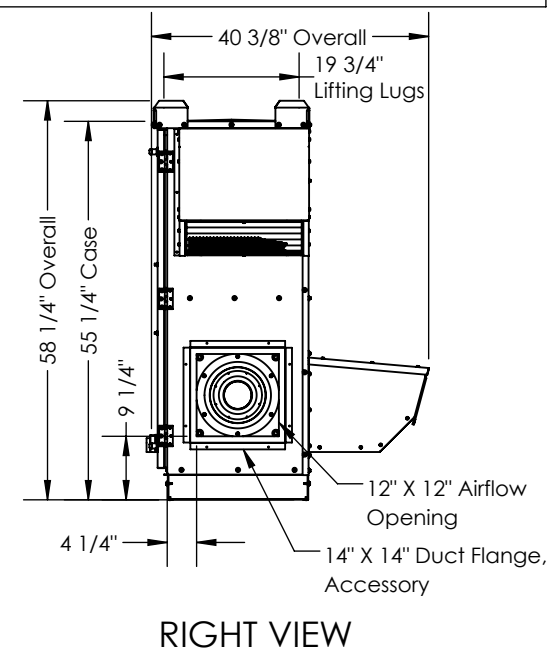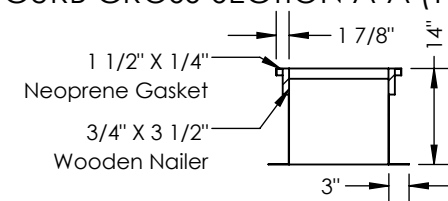

Model: HE10 RTF/RTH [Bypass]
 Drawing Type: Unit Dimension
 Version: FEB25

RenewAire
 Energy Recovery Ventilation