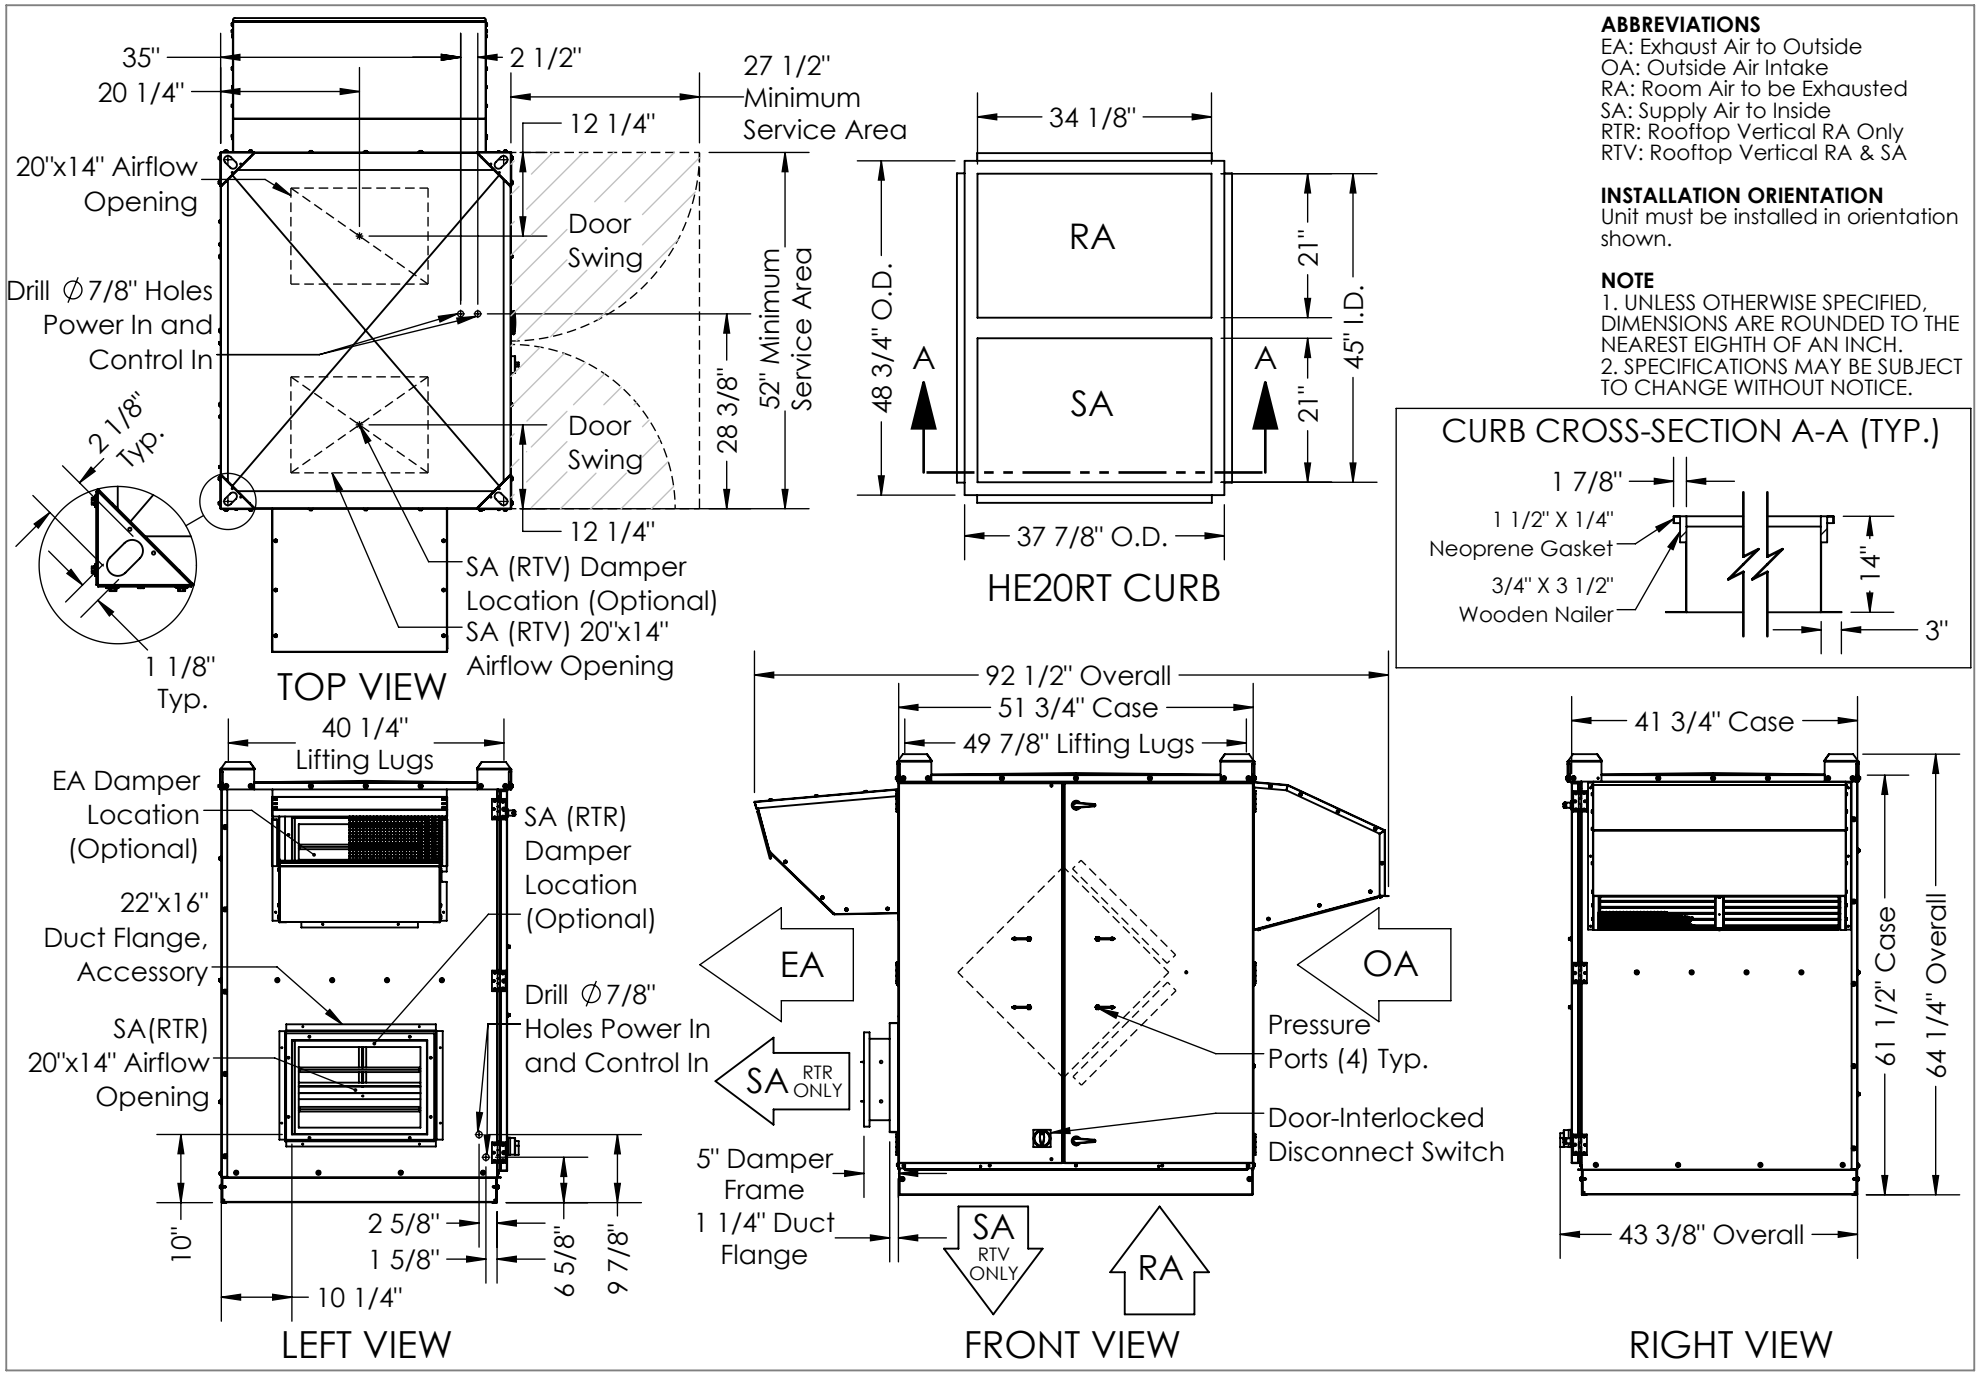

ABBREVIATIONS
EA: Exhaust Air to Outside
OA: Outside Air Intake
RA: Room Air to be Exhausted
SA: Supply Air to Inside
RTR: Rooftop Vertical RA Only
RTV: Rooftop Vertical RA & SA

INSTALLATION ORIENTATION
Unit must be installed in orientation shown.

NOTE
1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

Model: HE20 RTR/RTV
Drawing Type: Unit Dimension
Version: NOV25

RenewAire®
Energy Recovery Ventilation